
SatNOGS Client

Release 0+untagged.50.gfdc4a7e.dirty

SatNOGS

Apr 12, 2024

CONTENTS

1	Table of Contents	3
1.1	User guide	3
1.1.1	Requirements	3
1.1.2	Installation	3
1.1.3	Configuration	4
1.1.4	Usage	21
1.1.5	Doppler-corrected I/Q Streaming via UDP	21
1.2	Developer guide	21
1.2.1	Installation	21
1.2.2	Configuration	22
1.2.3	Code Quality Assurance	22
1.2.4	Testing	22
1.2.5	Automation	22
1.2.6	Dependency Management	23
1.3	Working with Docker	24
1.3.1	Requirements	24
1.3.2	Building	24
1.3.3	Configuration	24
1.3.4	Usage	24
1.4	Modules reference	24
1.4.1	satnogsclient	24
1.4.2	satnogsclient.locator.locator	24
1.4.3	satnogsclient.observer.observer	25
1.4.4	satnogsclient.observer.orbital	25
1.4.5	satnogsclient.artifacts	26
1.4.6	satnogsclient.waterfall	26
1.4.7	satnogsclient.observer.worker	27
1.4.8	satnogsclient.rig	28
1.4.9	satnogsclient.rotator	29
1.4.10	satnogsclient.scheduler.tasks	30
1.4.11	satnogsclient.settings	31
1.4.12	satnogsclient.radio.flowgraphs	31
2	Indices and tables	33
	Python Module Index	35
	Index	37

SatNOGS Client is the software responsible for automating satellite signal reception for SatNOGS. The main functions of SatNOGS Client is to pull observation jobs from SatNOGS Network and execute them on the a station host (usually a Raspberry Pi). These observation jobs create locally scheduled task which spawn SatNOGS Radio scripts for decoding and demodulating the signals. In addition to that, SatNOGS Client can optionally control a Hamlib compatible rotator to track the satellite. During the execution of an observation task, orbital calculations are performed to compensate for doppler shift and point the rotator to the correct direction. After the completion of an observation, the client gathers the observation artifacts and uploads them to SatNOGS Network.

TABLE OF CONTENTS

1.1 User guide

1.1.1 Requirements

- Python 3.6+
- Hamlib 4.0+ Python bindings
- GPSD 3.22+ Python bindings
- ATLAS 3.10+ library
- HDF5 1.10+ library

1.1.2 Installation

Debian

To install the required dependencies in Debian Bullseye run:

```
$ xargs -r -a packages.debian apt-get install
```

SatNOGS Client

To install SatNOGS Client run:

```
$ pip install satnogs-client
```

This will install a console script called `satnogs-client`.

1.1.3 Configuration

Configuration of SatNOGS Client is done through environment variables. The environment variables can also be defined in a file called `.env`, place on the project root directory. The format of each line in `.env` file is `VARIABLE=VALUE`.

Environment variables

SATNOGS_API_TOKEN

Type

string

Default

None

Required

Yes

Description

SatNOGS Network API token associated with an account in SatNOGS Network. This token is secret. It can be found in SatNOGS Network user page.

SATNOGS_PRE_OBSERVATION_SCRIPT

Type

path

Default

None

Required

No

Description

A path to an executable to be executed before an observation job is started. Execution of this script blocks the observation job.

SATNOGS_POST_OBSERVATION_SCRIPT

Type

path

Default

None

Required

No

Description

A path to an executable to be executed after an observation job has finished. Execution of this script blocks the completion of an observation job.

SATNOGS_STATION_ID**Type***integer***Default***None***Required***Yes***Description**

The ID of the SatNOGS Network station this client will act as. The station must be owned by the user with the defined API token.

SATNOGS_STATION_LAT**Type***float***Default***None***Required***Yes***Description**

Latitude of the station location. Higher precision of this value increases accuracy of Doppler correction while lower precision increases station location privacy.

SATNOGS_STATION_LON**Type***float***Default***None***Required***Yes***Description**

Longitude of the station location. Higher precision of this value increases accuracy of Doppler correction while lower precision increases station location privacy.

SATNOGS_STATION_ELEV**Type***integer***Default***None***Required***Yes*

Description

Elevation of the station location. Higher precision of this value increases accuracy of Doppler correction while lower precision increases station location privacy.

SATNOGS_GPSD_CLIENT_ENABLED

Type

boolean

Default

False

Required

No

Description

Enable SatNOGS Client to connect to a GPSd daemon to pull positional information. The position is queried once, during SatNOGS Client startup.

SATNOGS_GPSD_HOST

Type

host

Default

127.0.0.1

Required

No

Description

Hostname or IP address of GPSd to connect to for pulling positional information.

SATNOGS_GPSD_PORT

Type

port

Default

2947

Required

No

Description

Port of GPSd to connect to for pulling positional information.

SATNOGS_GPSD_TIMEOUT

Type*integer***Default***0***Required***No***Description**

Time to wait until GPSd returns positional information. A value of 0 means to wait indefinitely.

SATNOGS_APP_PATH

Type*path***Default***/tmp/.satnogs***Required***No***Description**

Base path for storing output files.

SATNOGS_OUTPUT_PATH

Type*path***Default***/tmp/.satnogs/data***Required***No***Description**

Path for storing “output files”. Output files are:

- Audio recordings (satnogs_{obs_id}_{timestamp}.ogg)
- Waterfall Images (waterfall_{obs_id}_{timestamp}.png)
- Decoded frames (data_{obs_id}), either raw, json-encoded or png image data from the APT demodulator

Temporary (potentially incomplete) files are:

- incomplete audio recordings (receiving_satnogs_{obs_id}_{timestamp}.ogg)
- incomplete APT images (receiving_data_{obs_id}_{timestamp}.png)
- Waterfall data files (receiving_waterfall_{obs_id}_{timestamp}.dat)

SatNOGS Artifacts are handled seperately.

SATNOGS_COMPLETE_OUTPUT_PATH

Type

path

Default

Required

No

Description

Path to move output files once they are completed. If set to empty, output files are deleted (default). Make sure to have enough storage available as the selected folder will continuously grow (about 30MB for a 5 minute observation).

SATNOGS_INCOMPLETE_OUTPUT_PATH

Type

path

Default

/tmp/.satnogs/data/incomplete

Required

No

Description

Path for moving incomplete output files.

SATNOGS_REMOVE_RAW_FILES

Type

boolean

Default

True

Required

No

Description

Remove raw data files used for generating waterfalls.

SATNOGS_KEEP_ARTIFACTS

Type

boolean

Default

False

Required

No

Description

Do not remove artifact files after successfully uploading them.

SATNOGS_ARTIFACTS_OUTPUT_PATH

Type

path

Default

/tmp/.satnogs/artifacts

Required

No

Description

Path for storing artifact files.

SATNOGS_VERIFY_SSL

Type

boolean

Default

True

Required

No

Description

Verify SSL certificates for HTTPS requests.

SATNOGS_NETWORK_API_URL

Type

url

Default

https://network.satnogs.org/api/

Required

No

Description

URL pointing to API of SatNOGS Network.

SATNOGS_NETWORK_API_QUERY_INTERVAL

Type

integer

Default

60

Required

No

Description

Interval (in seconds) for pulling jobs from SatNOGS Network API.

SATNOGS_NETWORK_API_POST_INTERVAL

Type

integer

Default

180

Required

No

Description

Interval (in seconds) for posting observation data to SatNOGS Network API.

SATNOGS_ROT_ENABLED

Type

boolean

Default

True

Required

No

Description

Enable SatNOGS Client to connect to an antenna rotator using the Hamlib library.

SATNOGS_ROT_MODEL

Type

string

Default

ROT_MODEL_DUMMY

Required

No

Description

Rotator model to control. This value must be the model string of a Hamlib rotator.

SATNOGS_ROT_BAUD

Type

integer

Default

19200

Required

No

Description

Hamlib rotator serial interface baud rate.

SATNOGS_ROT_PORT

Type*path***Default***/dev/ttyUSB0***Required***No***Description**

Path to Hamlib rotator serial port device. The device must be accessible to the user which SatNOGS Client is running.

SATNOGS_ROT_THRESHOLD

Type*integer***Default***4***Required***No***Description**

Azimuth/elevation threshold for moving the rotator. Position changes below this threshold will not cause the rotator to move.

SATNOGS_ROT_FLIP

Type*boolean***Default***False***Required***No***Description**

Enable rotator flipping during high elevation passes.

SATNOGS_ROT_FLIP_ANGLE

Type*integer***Default***75***Required***No***Description**

Elevation angle above which the rotator will flip.

SATNOGS_RIG_IP

Type
host

Default
127.0.0.1

Required
No

Description
Hostname or IP address of Hamlib rotctld.

SATNOGS_RIG_PORT

Type
integer

Default
4532

Required
No

Description
Hamlib rigctld TCP port.

SATNOGS_SOAPY_RX_DEVICE

Type
string

Default
None

Required
Yes

Description
SoapySDR device driver to use for RX. This setting must be defined in the form `driver=<name>` where `<name>` is the name of the SoapySDR device driver to use.

It also allows setting different devices for specific frequency ranges.

The format for multiple devices is a space delimited list of frequency range – device pairs:

`<min. freq.>-<max. freq>:driver=<name> <min. freq.>-<max. freq. >:driver=<name> ...`

Where frequencies are in MHz and `<name>` is the name of the SoapySDR device driver to use for the specified frequency range.

Example: two RTL-SDR receivers: one for VHF (135..148 MHz), another for UHF (430..470 MHz).

`135-148:driver=rtlsdr,serial=1 430-470:driver=rtlsdr,serial=2`

SATNOGS_RX_SAMP_RATE

Type*integer***Default***None***Required***Yes***Description**

SoapySDR device sample rate. Valid sample rates for attached devices can be queried using `SoapySDRUtil --probe`.

SATNOGS_RX_BANDWIDTH

Type*integer***Default***Flowgraph-defined***Required***No***Description**

SoapySDR device RF bandwidth. This setting configures the RF filter on devices that support it.

SATNOGS_DOPPLER_CORR_PER_SEC

Type*integer***Default***Flowgraph-defined***Required***No***Description**

Number of Doppler corrections per second requested by SatNOGS Radio.

SATNOGS_LO_OFFSET

Type*integer***Default***Flowgraph-defined***Required***No***Description**

SoapySDR device local oscillator offset to apply. This setting is used to shift the carrier away from the DC spike.

SATNOGS_PPM_ERROR

Type

float

Default

Flowgraph-defined

Required

No

Description

SoapySDR device oscillator frequency error correction to apply. This setting is defined in parts per million.

SATNOGS_GAIN_MODE

Type

string

Default

Overall

Required

No

Description

SoapySDR device gain mode. Valid values are: Overall, Specific, Settings Field.

SATNOGS_RF_GAIN

Type

float

Default

Flowgraph-defined

Required

No

Description

SoapySDR device overall gain, in dB. Device drivers set individual, device specific gains to approximate linearity on the overall gain.

SATNOGS_ANTENNA

Type

string

Default

None

Required

Yes

Description

SoapySDR device antenna to use for RX. Valid antennas for attached devices can be queried using `SoapySDRUtil --probe`.

SATNOGS_DEV_ARGS**Type**

string

Default

Flowgraph-defined

Required

No

Description

SoapySDR device arguments. Valid device arguments for attached devices can be queried using `SoapySDRUtil --probe`.

SATNOGS_STREAM_ARGS**Type**

string

Default

Flowgraph-defined

Required

No

Description

SoapySDR stream arguments. Valid stream arguments for attached devices can be queried using `SoapySDRUtil --probe`.

SATNOGS_TUNE_ARGS**Type**

string

Default

Flowgraph-defined

Required

No

Description

SoapySDR channel tune arguments.

SATNOGS_OTHER_SETTINGS

Type
string

Default
Flowgraph-defined

Required
No

Description
SoapySDR channel other settings.

SATNOGS_DC_REMOVAL

Type
boolean

Default
Flowgraph-defined

Required
No

Description
SoapySDR device automatic DC offset suppression.

SATNOGS_BB_FREQ

Type
string

Default
Flowgraph-defined

Required
No

Description
SoapySDR device baseband CORDIC frequency for devices that support it.

ENABLE_IQ_DUMP

Type
boolean

Default
False

Required
No

Description
Create I/Q data dumps for every observation. Use this feature with caution. Enabling this setting will store large amount of data on the filesystem.

IQ_DUMP_FILENAME

Type*path***Default***None***Required***No***Description**

Path to file for storing I/Q data dumps.

DISABLE_DECODED_DATA

Type*boolean***Default***False***Required***No***Description**

Disable output of decoded data.

UDP_DUMP_HOST

Type*host***Default***Flowgraph-defined***Required***No***Description**

IP destination of UDP data with Doppler corrected I/Q.

UDP_DUMP_PORT

Type*port***Default***57356***Required***No***Description**

Port for UDP data with Doppler corrected I/Q.

SATNOGS_UPLOAD_AUDIO_FILES

Type
boolean

Default
True

Required
No

Description
Enable/Disable uploading audio files to SatNOGS network.

SATNOGS_UPLOAD_WATERFALL_FILES

Type
boolean

Default
True

Required
No

Description
Enable/Disable uploading waterfalls to SatNOGS network.

SATNOGS_WATERFALL_AUTORANGE

Type
boolean

Default
True

Required
No

Description
Automatically set power level range of waterfall images.

SATNOGS_WATERFALL_MIN_VALUE

Type
integer

Default
-100

Required
No

Description
Minimum power level of waterfall images.

SATNOGS_WATERFALL_MAX_VALUE

Type
integer

Default
-50

Required
No

Description
Maximum power level of waterfall images.

SATNOGS_ARTIFACTS_ENABLED

Type
boolean

Default
False

Required
No

Description
Enable generation and uploading of HDF5 artifacts files to SatNOGS DB.

SATNOGS_ARTIFACTS_API_URL

Type
url

Default
<https://db.satnogs.org/api/>

Required
No

Description
URL pointing to API of SatNOGS DB for uploading artifacts.

SATNOGS_ARTIFACTS_API_POST_INTERVAL

Type
integer

Default
180

Required
No

Description
Interval (in seconds) for posting artifacts to SatNOGS DB.

SATNOGS_ARTIFACTS_API_TOKEN

Type

string

Default

None

Required

No

Description

SatNOGS DB API token associated with an account in SatNOGS DB. This token is secret. It is used to upload artifacts to SatNOGS DB. It can be found in SatNOGS DB user page.

SATNOGS_LOG_LEVEL

Type

string

Default

WARNING

Required

No

Description

SatNOGS Client logging level. Valid values are:

- CRITICAL
- ERROR
- WARNING
- INFO
- DEBUG

SATNOGS_SCHEDULER_LOG_LEVEL

Type

string

Default

WARNING

Required

No

Description

SatNOGS Client scheduler logging level. Valid values are:

- CRITICAL
- ERROR
- WARNING
- INFO

- DEBUG

SENTRY_DSN

Type*string***Default**`d50342fb75aa8f3945e2f846b77a0cdb7c7d2275`**Required***No***Description**

Sentry Data Source Name used for sending events to application monitoring and error tracking server.

SENTRY_ENABLED

Type*boolean***Default***False***Required***No***Description**

Enable sending events to Sentry application monitoring and error tracking server.

1.1.4 Usage

To execute the script, run it on the command line:

```
$ satnogs-client
```

1.1.5 Doppler-corrected I/Q Streaming via UDP

For realtime analysis during an observation each SatNOGS flowgraph offers streaming of doppler corrected I/Q data via an UDP sink. The destination of this sink can be configured by the environment variables `UDP_DUMP_HOST` and `UDP_DUMP_PORT`.

1.2 Developer guide

1.2.1 Installation

To install the required dependencies in Debian Bullseye run:

```
$ xargs -r -a packages.debian apt-get install
```

It is recommended to install the client in a virtualenv. The virtualenv needs to have access to system Python bindings. To create the virtualenv, you can use `virtualenvwrapper`. On the first time, create the virtualenv by running:

```
$ mkvirtualenv --system-site-packages -a . satnogs-client
```

To activate the virtualenv after it is created run:

```
$ workon satnogs-client
```

To install SatNOGS Client for development run in the project root directory:

```
$ pip install -e .[dev]
```

1.2.2 Configuration

This project uses `python-dotenv`. Configuration of `satnogsclient/settings.py` can be overridden by setting the respective environment variables or an `.env` file placed on the project root directory. Check [Configuration](#) for a list of all configuration variables.

1.2.3 Code Quality Assurance

The following code quality assurance tools are used in this project:

- `flake8`
- `isort`
- `yapf`
- `pylint`
- `robotframework`

1.2.4 Testing

System testing

Robot Framework is used for system testing. `robot/testsuites` contain Robot test cases and suites.

1.2.5 Automation

`tox` is used to automate development tasks. To execute the default list of tasks run:

```
$ tox
```

Environments

The following `tox` environments are available:

- `flake8` - Check code for common errors, coding style and complexity
- `isort` - Check code for correct imports order
- `isort-apply` - Sort imports
- `yapf` - Check code for correct formatting
- `yapf-apply` - Reformat source code
- `pylint` - Execute static code analysis
- `build` - Build source and binary distributions
- `upload` - Upload source and binary distributions to PyPI
- `docs` - Build documentation
- `deps` - Check for broken dependencies
- `pytest` - Execute application tests
- `robot-lint` - Lint system test cases and suites
- `robot-tidy` - Reformat system test cases and suites
- `robot` - Execute system testing

To execute a single environment run:

```
$ tox -e <environment>
```

1.2.6 Dependency Management

Dependencies of the package are defined in the `setup.cfg` file. Only top-level dependencies shall be defined, with the exception of overrides needed to workaround dependency incompatibilities. Each dependency is defined using the appropriate compatible version specifier. The compatible version specifiers shall be such that any newer compatible version can be installed, taking into account the versioning schema followed by each dependency. The `dev` extra contains packages and tools required for development, testing and packaging. When a dependency has been added, removed or updated in `setup.cfg`, the requirement files must be manually regenerated. To regenerate these files run:

```
$ ./contrib/refresh-requirements-docker.sh
```

The script will update the following files:

- `requirements.txt` - List of resolved dependencies for the package
- `requirements-dev.txt` - List of resolved dependencies for the development tools
- `constraints.txt` - List of resolved dependency constraints for both the package and development tools

Changes on the above files shall be committed together with the changes in `setup.cfg`.

1.3 Working with Docker

1.3.1 Requirements

- Docker Engine 20.10+
- Docker Compose 1.29+

1.3.2 Building

To build the SatNOGS Client image run:

```
$ docker-compose build
```

To build based on the unstable image of `librespace/gnuradio` run:

```
$ GNURADIO_IMAGE_TAG=satnogs-unstable docker-compose build
```

1.3.3 Configuration

Edit `docker-compose.yml` to set SatNOGS Client environment variables. Check [Configuration](#) for a list of all configuration variables.

1.3.4 Usage

To bring up SatNOGS Client containers, run:

```
$ docker-compose up
```

1.4 Modules reference

1.4.1 `satnogsclient`

SatNOGS Client module initialization

```
satnogsclient.main()
```

Main function

1.4.2 `satnogsclient.locator.locator`

```
class satnogsclient.locator.locator.Locator
```

```
    static show_location(gpsd)
```

```
    update_location()
```

1.4.3 satnogsclient.observer.observer

class satnogsclient.observer.observer.Observer

observe()

Starts threads for rotctl and rigctl.

plot_waterfall(*waterfall*)

poll_gnu_proc_status(*flowgraph*)

remove_waterfall_file()

rename_data_file()

rename_ogg_file()

run_rig()

run_rot()

setup(*observation_id, tle, observation_end, frequency, mode, baud*)

Sets up required internal variables. * returns True if setup is ok * returns False if issue is encountered

satnogsclient.observer.observer.post_and_save_artifacts(*artifacts_file, observation_id*)

Accepts a TemporaryFile *artifacts_file* opened at the beginning of the file, saves it to disk if enabled, then tries to upload it to satnogs-db. Finally closes this file.

Parameters

- **artifacts_file** (*file*) – The Artifact file (opened at position 0).
- **observation_id** (*str*) – The observation id of the associated observation (for enhanced logging).

satnogsclient.observer.observer.rx_device_for_frequency(*rx_device_spec, frequency*)

satnogsclient.observer.observer.save_artifacts(*artifacts_file, filename*)

Accepts a TemporaryFile *artifacts_file* opened at the beginning of the file and writes this file to disk. Finally seeks back to the beginning of the file.

NOTE: Does NOT close this file.

Parameters

- **artifacts_file** (*file*) – TemporaryFile, open at position 0
- **filename** (*str*) – Filename of artifacts file

1.4.4 satnogsclient.observer.orbital

satnogsclient.observer.orbital.pinpoint(*observer_dict, satellite_dict, timestamp=None*)

Provides azimuth and altitude of tracked object.

args:

observer_dict: dictionary with details of observation point. *satellite_dict*: dictionary with details of satellite. *time*: timestamp we want to use for pinpointing the observed object.

returns:

Dictionary containing azimuth, altitude and “ok” for error detection.

1.4.5 satnogsclient.artifacts

```
class satnogsclient.artifacts.Artifacts(waterfall, metadata)  
    create()
```

1.4.6 satnogsclient.waterfall

```
exception satnogsclient.waterfall.EmptyArrayError
```

Empty data array exception

```
class satnogsclient.waterfall.Waterfall(datafile_path)
```

Parse waterfall data file

Parameters

datafile_path (*str_array*) – Path to data file

```
plot(figure_path, vmin=None, vmax=None)
```

Plot waterfall into a figure

Parameters

- **figure_path** (*str*) – Path of figure file to save
- **vmin** (*int*) – Minimum value range
- **vmax** (*int*) – Maximum value range

```
satnogsclient.waterfall._compress_waterfall(waterfall)
```

Compress spectra of waterfall

Parameters

waterfall (*dict*) – Waterfall data

Returns

Compressed spectra

Return type

dict

```
satnogsclient.waterfall._get_waterfall(datafile_path)
```

Get waterfall data

Parameters

datafile_path (*str_array*) – Path to data file

Returns

Waterfall data including compressed data

Return type

dict

```
satnogsclient.waterfall._read_waterfall(datafile_path)
```

Read waterfall data file

Parameters

datafile_path (*str*) – Path to data file

Raises

- *EmptyArrayError* – Empty waterfall data

- **IndexError** – Invalid waterfall data
- **FileNotFoundError** – No waterfall data file found
- **OSError** – Could not open waterfall data file

Returns

Waterfall data

Return type

dict

1.4.7 satnogsclient.observer.worker

class satnogsclient.observer.worker.**Worker**(*time_to_stop=None, sleep_time=None*)

Class to facilitate as a worker for rotctl/rigctl.

_communicate_tracking_info()

_observation_end = None

_sleep_time = 0.1

_stay_alive = False

property is_alive

Returns if tracking loop is alive or not.

observer_dict = {}

satellite_dict = {}

send_to_socket(*pin, sock*)

trackobject(*observer_dict, satellite_dict*)

Sets tracking object. Can also be called while tracking to manipulate observation.

Parameters

- **observer_dict** (*dict*) – Location of the Observer, example: {'lon': 0.0, 'lat': 0.0, 'elev': 0.0}
- **satellite_dict** (*dict*) – TLE of the satellite, example: {'tle0': '', 'tle1': '', 'tle2': ''}

trackstart()

Starts the thread that communicates tracking info to remote socket. Stops by calling trackstop()

trackstop()

Sets object flag to false and stops the tracking thread.

class satnogsclient.observer.worker.**WorkerFreq**(*ip, port, **kwargs*)

_communicate_tracking_info()

Runs as a daemon thread, communicating tracking info to remote socket. Uses observer and satellite objects set by trackobject(). Will exit when observation_end timestamp is reached.

_frequency = None

send_to_socket(*pin, sock*)

trackobject(*frequency, observer_dict, satellite_dict*)

Track object

Parameters

- **frequency** (*int*) – Frequency of original signal in Hz
- **observer_dict** (*dict*) – Location of the Observer example: {'lon': 0.0, 'lat': 0.0, 'elev': 0.0}
- **satellite_dict** (*dict*) – TLE of the satellite example: {'tle0': '', 'tle1': '', 'tle2': ''}

class satnogsclient.observer.worker.**WorkerTrack**(*port, **kwargs*)

_altitude = None

_azimuth = None

_communicate_tracking_info()

Runs as a daemon thread, communicating tracking info to remote socket. Uses observer and satellite objects set by trackobject(). Will exit when observation_end timestamp is reached.

_flip = False

_midpoint = None

static find_midpoint(*observer_dict, satellite_dict, start*)

static flip_coordinates(*azi, alt, timestamp, midpoint*)

static normalize_angle(*num, lower=0, upper=360*)

send_to_socket(*pin, sock*)

trackobject(**args*)

Track object

Parameters

args – Positional Arguments of parent class Worker

1.4.8 satnogsclient.rig

class satnogsclient.rig.**Rig**(*model=Hamlib.RIG_MODEL_DUMMY, path="", debug=Hamlib.RIG_DEBUG_WARN*)

Communicate and interface with rigs

Parameters

- **model** – Model of Hamlib rig
- **path** (*str, optional*) – Path or address to Hamlib rig device
- **debug** (*int, optional*) – Hamlib rig debug level

close()

Close Hamlib rig device

property frequency

Get rig frequency

Returns

Rig frequency

Return type

float

open()

Open Hamlib rig device

property vfo

Get active VFO

Returns

Active VFO

Return type

int

1.4.9 satnogsclient.rotator

class satnogsclient.rotator.**Rotator**(*model, baud, port*)

Communicate and interface with rotators

Parameters

- **model** (*str*) – Model of rotator e.g. “ROT_MODEL_EASYCOMM3” or “ROT_MODEL_DUMMY”
- **baud** (*int, optional*) – The baud rate of serial communication, e.g. 19200
- **port** (*str*) – The port of the rotator, e.g. “/dev/ttyUSB0”

close()

End the communication with rotator

get_conf(cmd)

Return the configuration of a register

Parameters

cmd (*int*) – Number of the register

Returns

Value of register

Return type

str

get_info()

Return information about the rotator

Returns

Information about the rotator

Return type

str

move(*direction*, *speed*)

Move the rotator with speed (mdeg/s) to specific direction

Parameters

- **direction** (*str*) – The direction of movement, e.g. ROT_MOVE_UP, ROT_MOVE_DOWN, ROT_MOVE_LEFT, ROT_MOVE_RIGHT
- **speed** (*int*) – The velocity set point in mdeg/s

open()

Start the communication with rotator

park()

Move the rotator to park position and return the current position

Returns

Current position in degrees

Return type

None or list[float, float]

property position

Return the position in degrees of azimuth and elevation

Returns

Position in degrees

Return type

list[float, float]

reset()

Move the rotator to home position and return the current position

Returns

Current position in degrees

Return type

None or list[float, float]

stop()

Stop the rotator and return the current position

Returns

Current position in degrees

Return type

None or list[float, float]

1.4.10 satnogsclient.scheduler.tasks

`satnogsclient.scheduler.tasks.get_jobs()`

Query SatNOGS Network API to GET jobs.

`satnogsclient.scheduler.tasks.keep_or_remove_file(filename)`

`satnogsclient.scheduler.tasks.post_data()`

PUT observation data back to Network API.

`satnogsclient.scheduler.tasks.spawn_observer(**kwargs)`

`satnogsclient.scheduler.tasks.status_listener()`

`satnogsclient.scheduler.tasks.upload_observation_data(observation_id, observation, fil)`

Upload observation data to SatNOGS Network API.

1.4.11 satnogsclient.settings

SatNOGS Client settings file

`satnogsclient.settings._cast_or_none(func, value)`

`satnogsclient.settings.validate(logger)`

Validate the provided settings: - Check for the existence of all required variables - Validate format of the provided value for some required variables

Since this module has to be loaded before the logger has been initialized, this method requires a configured logger to be passed.

Arguments: logger – the output logger

1.4.12 satnogsclient.radio.flowgraphs

`class satnogsclient.radio.flowgraphs.Flowgraph(device, sampling_rate, frequency, mode, baud, output_data)`

Execute SatNOGS Flowgraphs

Parameters

- **device** (*str*) – SoapySDR device
- **sampling_rate** (*int*) – Sampling rate
- **frequency** (*int*) – RX frequency
- **mode** (*str*) – Mode of operation
- **baud** (*int*) – Baud rate or WPM
- **output_data** (*dict*) – Dictionary of output data

property enabled

Get flowgraph running status

Returns

Flowgraph running status

Return type

bool

property info

Get information and parameters of flowgraph and radio

Returns

Information about flowgraph and radio

Return type

dict

INDICES AND TABLES

- `genindex`
- `modindex`
- `search`

PYTHON MODULE INDEX

S

- `satnogsclient`, [24](#)
- `satnogsclient.artifacts`, [26](#)
- `satnogsclient.locator.locator`, [24](#)
- `satnogsclient.observer.observer`, [25](#)
- `satnogsclient.observer.orbital`, [25](#)
- `satnogsclient.observer.worker`, [27](#)
- `satnogsclient.radio.flowgraphs`, [31](#)
- `satnogsclient.rig`, [28](#)
- `satnogsclient.rotator`, [29](#)
- `satnogsclient.scheduler.tasks`, [30](#)
- `satnogsclient.settings`, [31](#)
- `satnogsclient.waterfall`, [26](#)

Symbols

`_altitude` (*satnogsclient.observer.worker.WorkerTrack attribute*), 28
`_azimuth` (*satnogsclient.observer.worker.WorkerTrack attribute*), 28
`_cast_or_none()` (in module *satnogsclient.settings*), 31
`_communicate_tracking_info()` (*satnogsclient.observer.worker.Worker method*), 27
`_communicate_tracking_info()` (*satnogsclient.observer.worker.WorkerFreq method*), 27
`_communicate_tracking_info()` (*satnogsclient.observer.worker.WorkerTrack method*), 28
`_compress_waterfall()` (in module *satnogsclient.waterfall*), 26
`_flip` (*satnogsclient.observer.worker.WorkerTrack attribute*), 28
`_frequency` (*satnogsclient.observer.worker.WorkerFreq attribute*), 27
`_get_waterfall()` (in module *satnogsclient.waterfall*), 26
`_midpoint` (*satnogsclient.observer.worker.WorkerTrack attribute*), 28
`_observation_end` (*satnogsclient.observer.worker.WorkerTrack attribute*), 27
`_read_waterfall()` (in module *satnogsclient.waterfall*), 26
`_sleep_time` (*satnogsclient.observer.worker.Worker attribute*), 27
`_stay_alive` (*satnogsclient.observer.worker.Worker attribute*), 27

A

Artifacts (class in *satnogsclient.artifacts*), 26

C

`close()` (*satnogsclient.rig.Rig method*), 28
`close()` (*satnogsclient.rotator.Rotator method*), 29
`create()` (*satnogsclient.artifacts.Artifacts method*), 26

E

EmptyArrayError, 26
`enabled` (*satnogsclient.radio.flowgraphs.Flowgraph property*), 31

F

`find_midpoint()` (*satnogsclient.observer.worker.WorkerTrack static method*), 28
`flip_coordinates()` (*satnogsclient.observer.worker.WorkerTrack static method*), 28
Flowgraph (class in *satnogsclient.radio.flowgraphs*), 31
`frequency` (*satnogsclient.rig.Rig property*), 28

G

`get_conf()` (*satnogsclient.rotator.Rotator method*), 29
`get_info()` (*satnogsclient.rotator.Rotator method*), 29
`get_jobs()` (in module *satnogsclient.scheduler.tasks*), 30

I

`info` (*satnogsclient.radio.flowgraphs.Flowgraph property*), 31
`is_alive` (*satnogsclient.observer.worker.Worker property*), 27

K

`keep_or_remove_file()` (in module *satnogsclient.scheduler.tasks*), 30

L

Locator (class in *satnogsclient.locator.locator*), 24

M

`main()` (in module *satnogsclient*), 24
module
satnogsclient, 24
satnogsclient.artifacts, 26
satnogsclient.locator.locator, 24
satnogsclient.observer.observer, 25
satnogsclient.observer.orbital, 25
satnogsclient.observer.worker, 27

satnogsclient.radio.flowgraphs, 31
satnogsclient.rig, 28
satnogsclient.rotator, 29
satnogsclient.scheduler.tasks, 30
satnogsclient.settings, 31
satnogsclient.waterfall, 26
move() (*satnogsclient.rotator.Rotator* method), 29

N

normalize_angle() (*satnogsclient.observer.worker.WorkerTrack*
static method), 28

O

observe() (*satnogsclient.observer.observer.Observer*
method), 25
Observer (class in *satnogsclient.observer.observer*), 25
observer_dict (*satnogsclient.observer.worker.Worker*
attribute), 27
open() (*satnogsclient.rig.Rig* method), 29
open() (*satnogsclient.rotator.Rotator* method), 30

P

park() (*satnogsclient.rotator.Rotator* method), 30
pinpoint() (in module *satnogsclient.observer.orbital*),
25
plot() (*satnogsclient.waterfall.Waterfall* method), 26
plot_waterfall() (*satnogsclient.observer.observer.Observer*
method), 25
poll_gnu_proc_status()
(*satnogsclient.observer.observer.Observer*
method), 25
position (*satnogsclient.rotator.Rotator* property), 30
post_and_save_artifacts() (in module
satnogsclient.observer.observer), 25
post_data() (in module *satnogsclient.scheduler.tasks*),
30

R

remove_waterfall_file()
(*satnogsclient.observer.observer.Observer*
method), 25
rename_data_file() (*satnogsclient.observer.observer.Observer*
method), 25
rename_ogg_file() (*satnogsclient.observer.observer.Observer*
method), 25
reset() (*satnogsclient.rotator.Rotator* method), 30
Rig (class in *satnogsclient.rig*), 28
Rotator (class in *satnogsclient.rotator*), 29
run_rig() (*satnogsclient.observer.observer.Observer*
method), 25
run_rot() (*satnogsclient.observer.observer.Observer*
method), 25
rx_device_for_frequency() (in module
satnogsclient.observer.observer), 25

S

satellite_dict (*satnogsclient.observer.worker.Worker*
attribute), 27
satnogsclient
module, 24
satnogsclient.artifacts
module, 26
satnogsclient.locator.locator
module, 24
satnogsclient.observer.observer
module, 25
satnogsclient.observer.orbital
module, 25
satnogsclient.observer.worker
module, 27
satnogsclient.radio.flowgraphs
module, 31
satnogsclient.rig
module, 28
satnogsclient.rotator
module, 29
satnogsclient.scheduler.tasks
module, 30
satnogsclient.settings
module, 31
satnogsclient.waterfall
module, 26
save_artifacts() (in module
satnogsclient.observer.observer), 25
send_to_socket() (*satnogsclient.observer.worker.Worker*
method), 27
send_to_socket() (*satnogsclient.observer.worker.WorkerFreq*
method), 27
send_to_socket() (*satnogsclient.observer.worker.WorkerTrack*
method), 28
setup() (*satnogsclient.observer.observer.Observer*
method), 25
show_location() (*satnogsclient.locator.locator.Locator*
static method), 24
spawn_observer() (in module
satnogsclient.scheduler.tasks), 30
status_listener() (in module
satnogsclient.scheduler.tasks), 31
stop() (*satnogsclient.rotator.Rotator* method), 30

T

trackobject() (*satnogsclient.observer.worker.Worker*
method), 27
trackobject() (*satnogsclient.observer.worker.WorkerFreq*
method), 27
trackobject() (*satnogsclient.observer.worker.WorkerTrack*
method), 28
trackstart() (*satnogsclient.observer.worker.Worker*
method), 27

`trackstop()` (*satnogsclient.observer.worker.Worker*
method), 27

U

`update_location()` (*satnogsclient.locator.locator.Locator*
method), 24

`upload_observation_data()` (*in module*
satnogsclient.scheduler.tasks), 31

V

`validate()` (*in module satnogsclient.settings*), 31

`vfo` (*satnogsclient.rig.Rig* property), 29

W

`Waterfall` (*class in satnogsclient.waterfall*), 26

`Worker` (*class in satnogsclient.observer.worker*), 27

`WorkerFreq` (*class in satnogsclient.observer.worker*), 27

`WorkerTrack` (*class in satnogsclient.observer.worker*),
28